



# SealGreen SCR1600 Coatings Remover



Size	Makes	Covers
Quart	Quart	31 sqft
Gallon	Gallon	125 sqft
5 Gallons	5 Gallons	625 sqft
55 Gallons	55 Gallons	6,875 sqft

## Application –

- Apply by pouring product directly on the coating and spreading with either a brush or a thick nap roller. It is very important to apply a thick even layer. Do not allow the remover to dry.
- Do not brush, scrape, or remove the stripper from the surface until it has had time to work (best at 8 to 12 hours or overnight).
- To check the progress of the stripping action, use a scraper to see if the coating softened down to the surface.
- Some coatings may require another application. In this case, reapply the coatings remover following the steps above.
- After use, it will leave a residue. Clean this with SealGreen Oil Cleaner/Degreaser using a fibrous scrub pad. Allow the surface to dry before any further preparations.